







# Manual 8EXY ATEX / Explosion proof

WWW.HBI-LIGHTING.COM



The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical Regulations and national requirements.

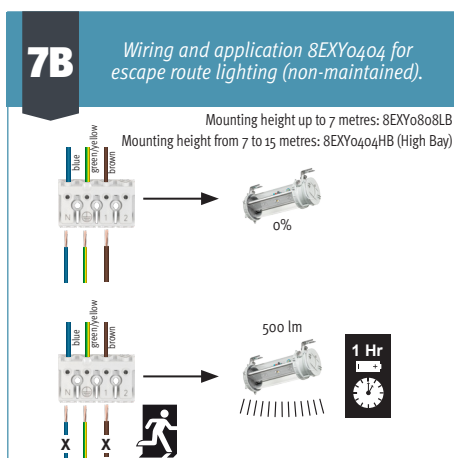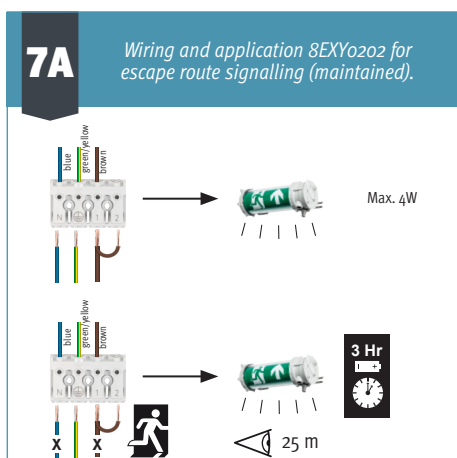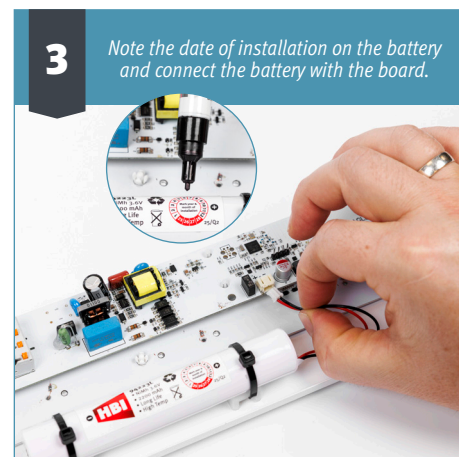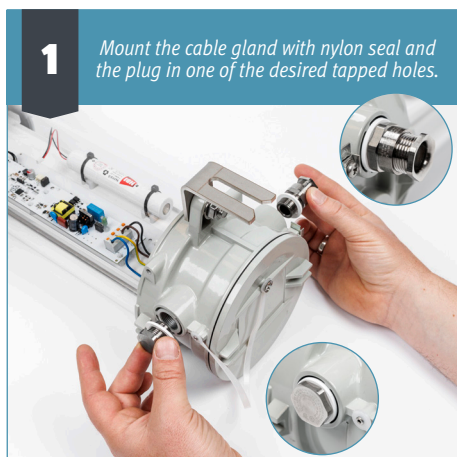

**9** Info Autotest

**AutoTest:**  
According to IEC 62034:2012. The luminaire performs a monthly function test and an annual a full duration test. One bi-colour LED indicator shows the status of the fixture: green = OK, red = fault.

**Led slow flash red (1x per 2 sec):**  
Battery failure. (1) Disconnect mains voltage. (2) Replace battery Long Life NiMh 3,6V / 2,2Ah High Temp. (3) Reconnect fixture.\*

**Led quick flash red (2x per sec):**  
Lamp fault or driver fault. Request RMA and send the interior for repair.\*

**\* Remote monitoring with LoRa:**  
This luminaire is equipped with LoRa as standard and can be managed wirelessly. For example, via the Sqippa Online platform.